









Using their configuration software set the VP-X to automatically wigwag the landing lights (output Y and Z) above a set airspeed. No warm-up time needed.

You can of course use two regular panel switches instead of a progressive switch.