



Flyleds


'Conventional' use of VP-X

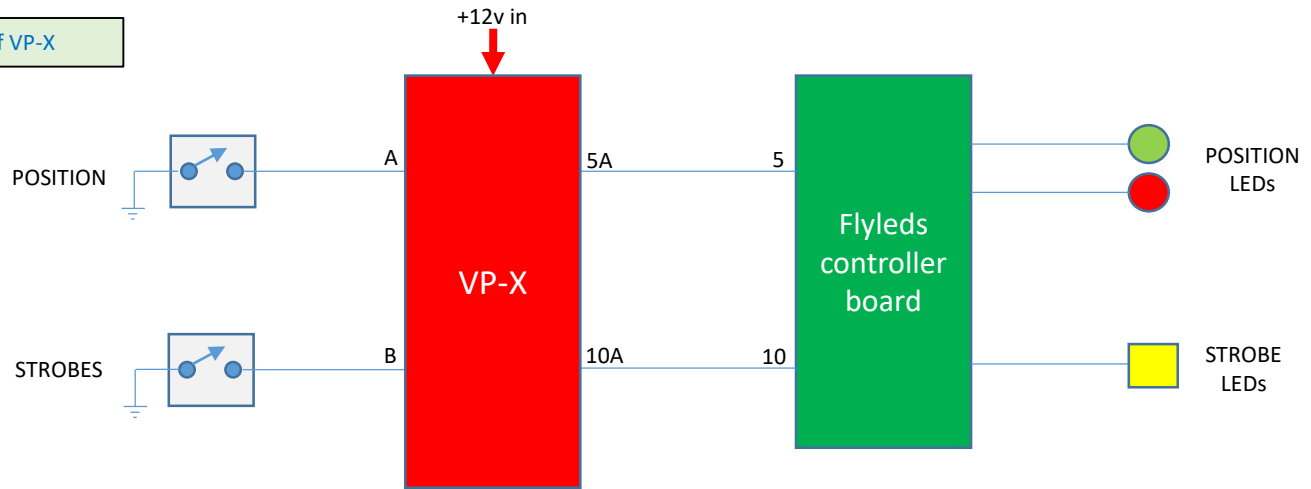

Using VP-X as a power source only

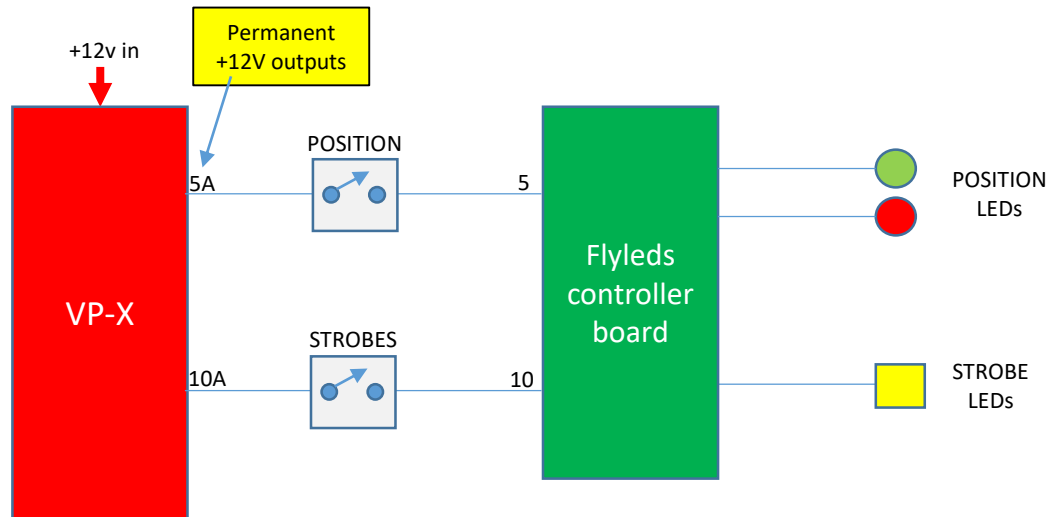

Note: No VP-X input switches used

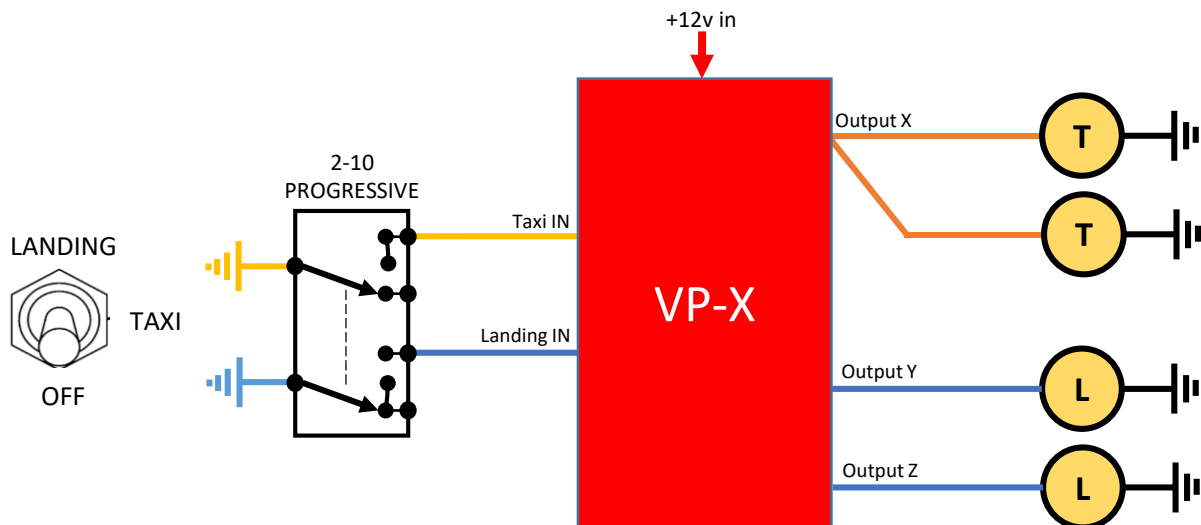

Use the VP-X configuration software to set the VP-X to automatically wigwag the landing lights (output Y and Z) above a set airspeed. No warm-up time needed. You can of course use two regular panel switches instead of a progressive switch.